

Steering Column Adapter Installation Instructions

Instructions:

With so many different steering wheel adapters on the market there are some minor differences and in some cases, if the steering wheel adapter feels loose or too tight it might be necessary to install the horn contact nut (3a) instead of the horn contact spacer.

1. After installing your steering wheel adapter (as shown in the diagram), if it feels loose or too tight proceed to step #2.
2. Remove the adapter nut and steering wheel adapter.
3. Replace the horn contact spacer (3) with the horn contact nut (3a). (Note: use only one or the other and not both.)
4. Installing nut 3a will allow you to fine tune the gap between the column housing and steering wheel adapter.
5. Thread down the horn contact nut 3a to the desired amount to achieve the correct gap between the column and adapter you are looking for.
6. After the gap is set properly replace the steering wheel adapter and tighten the top nut to secure the adapter properly in place.
7. Proceed with the steering wheel installation from here.

