



Steering, Brake & Suspension Specialists

#20036 - Parking Brake Cable Extension Installation Instructions

Parts:

2 ea Extension Sleeves
2 ea E-Clips


Note:

Read these instructions completely before attempting this conversion.

Make sure this kit fits your application before painting or plating. Parts that have been painted, plated or modified may not be returned.

Instructions:

1. Install the threaded portion of the extension sleeve through the parking brake hole on the caliper.
2. Install the E-clip on to the threads of the extension sleeve.
3. Install the parking brake cable through the extension sleeve.
4. Connect the parking brake cable to the parking brake lever on the caliper.
5. Connect and adjust the other end of the parking brake cable.

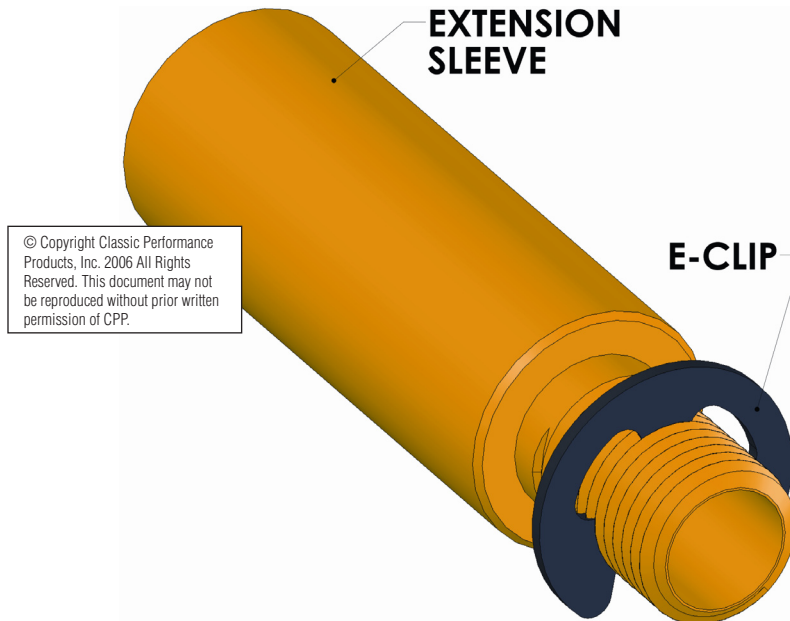

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500
175 E. Freedom Avenue | Anaheim, CA 92801 | www.classicperform.com