



Steering, Brake & Suspension Specialists

#4755FBB - Firewall Mount Brake Kit Instructions for 1947-55 Chevy Trucks

Parts List:



- 1 ea. Steering Box Mounting Bracket
- 1 ea. Steering Arm
- 1 ea. Adjustable Draglink

Notes:


Make sure this kit fits your application before painting or plating. Beware that chroming or painting the booster can cause it to malfunction if not performed properly. Parts that have been painted, plated or modified may not be returned.

Instructions:

1. Remove the stock braces between the firewall and the steering support. Cut a center hole for the booster 6" down from the lip and 1-1/2" from the center of the first rib using a 2-1/2" hole saw. Removal of stock gauge clusters ease in the installation.

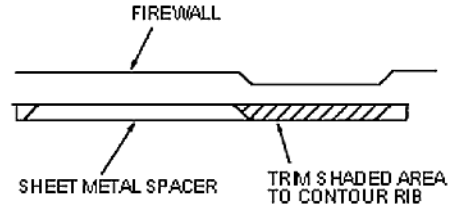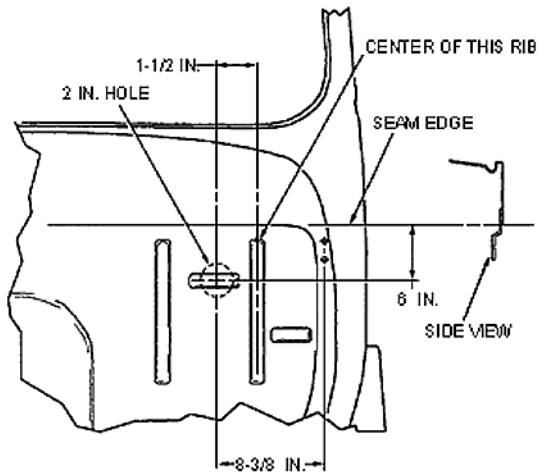

2. If the firewall has a rib, trim the metal spacer to fit as shown in the second diagram. If the firewall is flat, discard the sheet metal spacer.

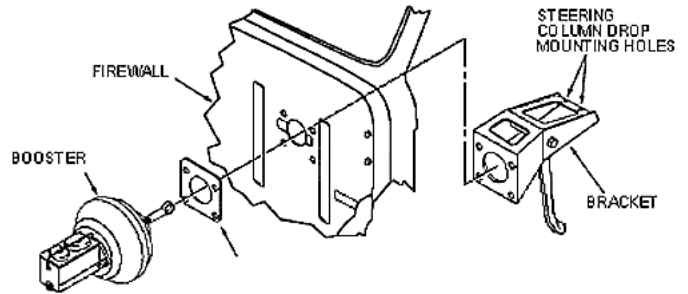

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500

175 E. Freedom Avenue | Anaheim, CA 92801 | www.classicperform.com