



*Steering, Brake & Suspension Specialists*


## **#5557SMF - Bolt-In Side Engine Mount Kit Instructions** *for 1955-57 Fullsize GM Car*

### **Notes:**

Read these installation instructions completely before attempting this installation.

### **Instructions:**

1. Clean the area of the frame where the motor mount will be installed. Place the motor mount against the frame with the front edge against the crossmember rivet. With the hardware provided, use the existing hole in the frame to bolt on the motor mount. The '55 will use the front hole and the '56-'57 will use the rear hole. It is not necessary to do so, but for added strength you may want to drill a hole so that the unused mounting hole can be used.
2. With the mount installed, proceed to drill the hole through the top of the frame for the top mounting holes.
3. Keep in mind that when installing these mounts that the brake lines may need to be repositioned.
4. For high performance applications we recommend that the mounts be welded in.

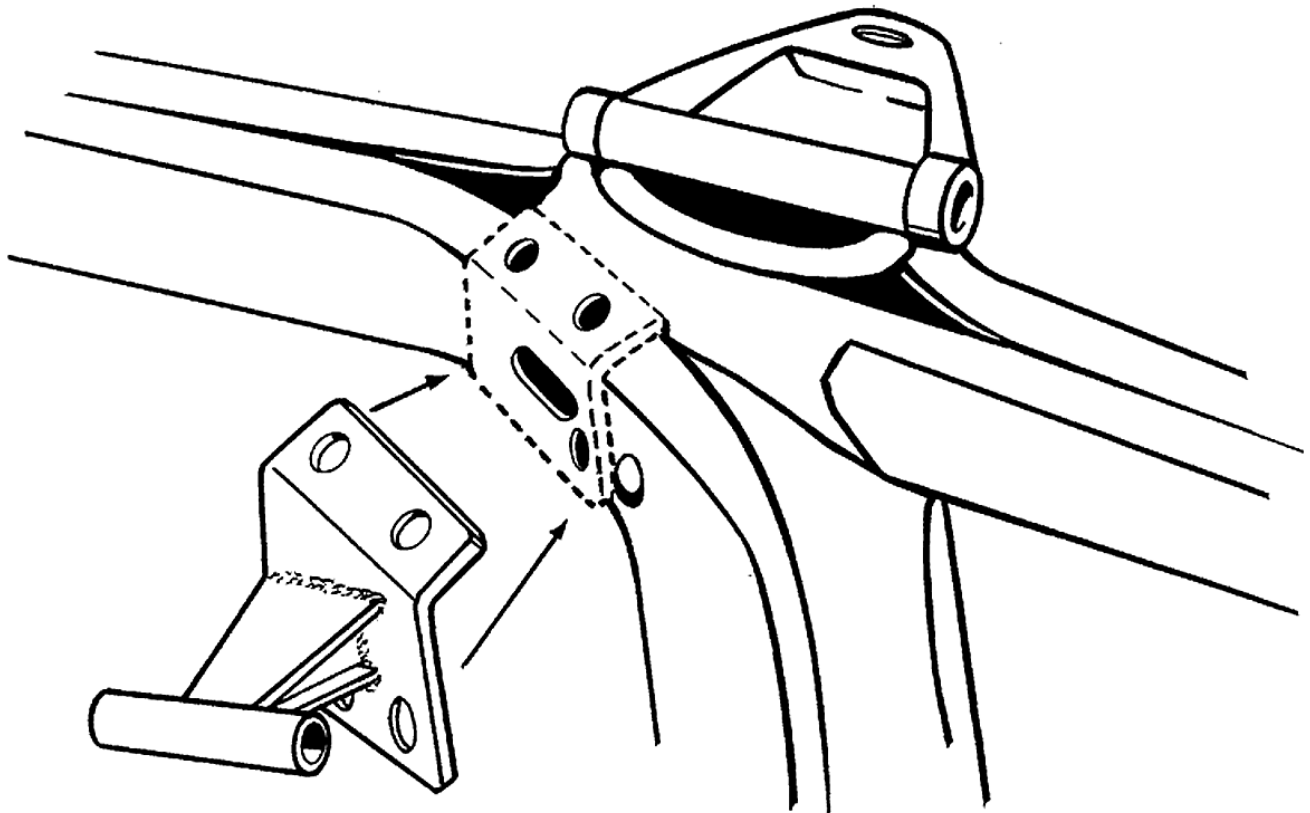

***For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.***

**Classic Performance Products, Inc. 714.522.2000** | fax 714.522.2500  
378 E. Orangethorpe Ave. | Placentia, CA 92870 | [www.classicperform.com](http://www.classicperform.com)