


Steering, Brake & Suspension Specialists

#6072COK Installation Instructions

1960-72 Chevy Truck Coil-Over Kit

| ITEM | DESCRIPTION |
|------|---------------------------------|
| A | LOCATING POSITION (RECOMMENDED) |
| B | 5/8" x 5" GRADE 8 BOLT |
| C | UPPER MOUNTING BRACKET |
| D | 7/16" x 1" GRADE 5 BOLT |
| E | COIL-OVER SHOCK |
| F | LOWER MOUNTING BRACKET |
| G | LOWERING BLOCK (IF APPLICABLE) |
| H | U-BOLT (IF APPLICABLE) |

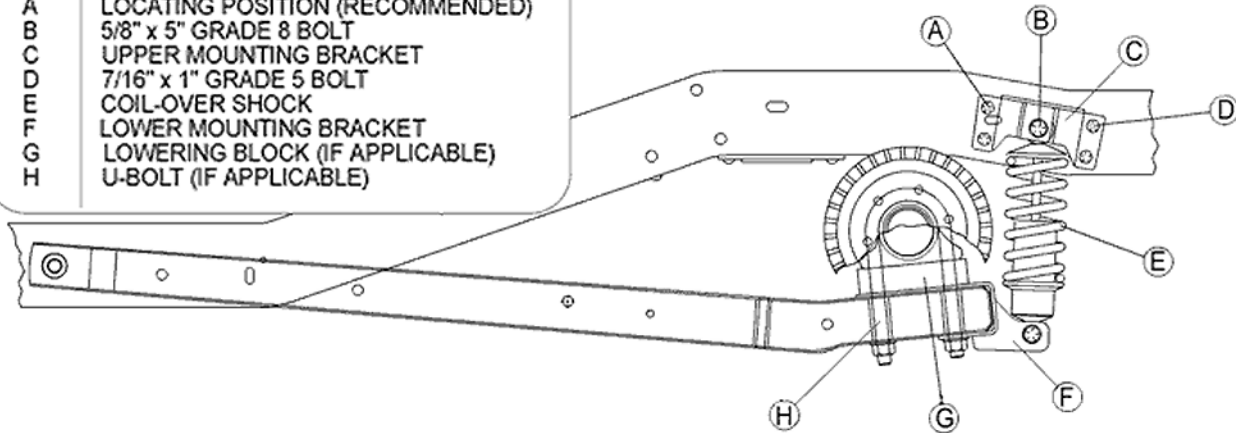

Note:

Read these instructions completely before attempting this conversion.

Make sure this kit fits your application before painting or plating. Parts that have been painted, plated or modified may not be returned.

Instructions:

1. Jack up vehicle and secure it with jack stands
2. Remove shock absorbers
3. Remove coil springs
4. Carefully loosen and remove u-bolt one side only
5. Place lower bracket over end of trailing arm and lowering block on top, if applicable
6. Reinstall u-bolt
7. Repeat procedure on opposite side
8. Install Coil-over shocks in lower brackets
9. Install upper brackets on to coil-over shocks
10. Drill and mount upper brackets, as shown below tighten all bolts carefully
11. Enjoy your improved suspension

Note: Removal of bed is not necessary.

© Copyright Classic Performance Products, Inc. 2006 All Rights Reserved. This document may not be reproduced without prior written permission of CPP.

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500

378 E. Orangethorpe Ave. | Placentia, CA 92870 | www.classicperform.com