

#6072FP Installation Instructions

1960-72 Chevy Truck Firewall Mounting Plate


Note:

Read these instructions completely before attempting this conversion.

Make sure this kit fits your application before painting or plating. Beware that chroming or painting the booster can cause it to malfunction if not performed properly. Parts that have been painted, plated or modified may not be returned.

Instructions:

1. Remove the original master cylinder.
2. Mount the firewall plate to the firewall using the holes marked "A" in the diagram.
3. Drill the four 3/8" holes marked "B" in the diagram using the firewall plate as a template.
4. Remove the bolt from the hole marked A**
5. Bolt the booster in place using the holes marked "B".

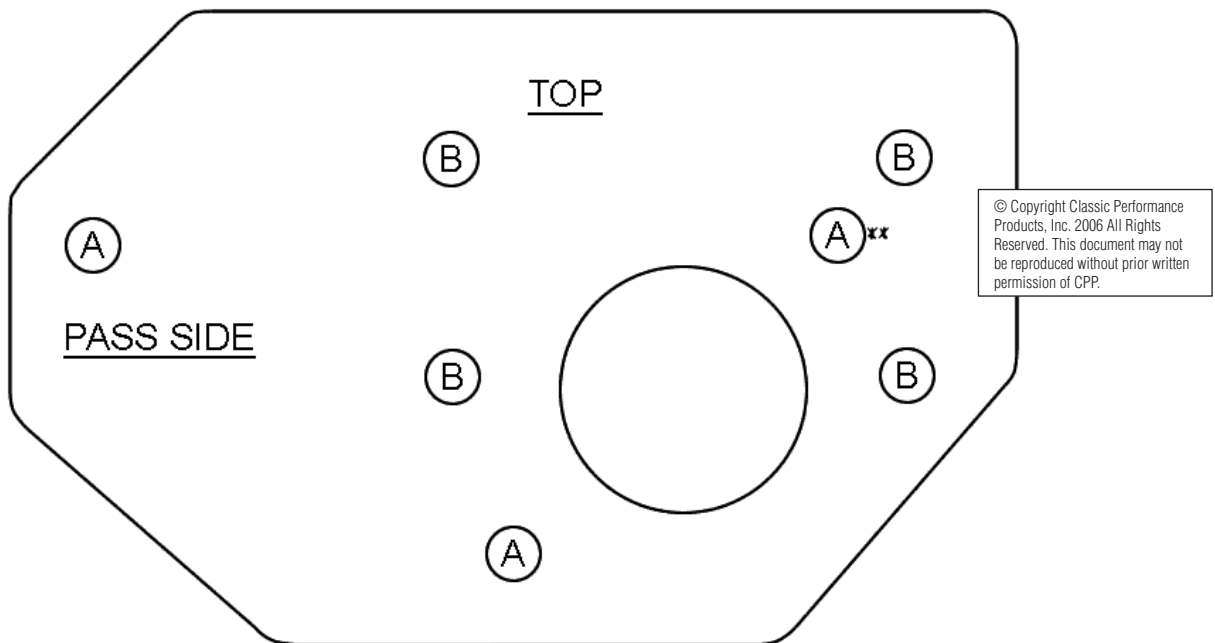

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500
175 E. Freedom Avenue | Anaheim, CA 92801 | www.classicperform.com