



Steering, Brake & Suspension Specialists

#6267SA - Upgrade/ Replacement Steering Arm Instructions for 1962-67 Chevrolet Nova and Chevy II

Parts List:

1 ea	1962-1967 Left Steering Arm
1 ea	1962-1967 Right Steering Arm

Note:


1962 early 1963 models will need later model spindles with steering arm mounting holes at 4 1/8" spacing.

Instructions:

1. Remove the outer tie rods from the steering arms.

2. Remove the steering arm from the spindles.

3. Install the new steering arms on the spindles. The new steering arms have 1/2" mounting holes. The 1963 to early 1965 spindles can be upgraded to late 1965 to 1967 1/2" hardware. To update the hardware enlarge the spindle and brake backing plate holes to 1/2" and use new 1/2" grade 8 nuts and bolts.

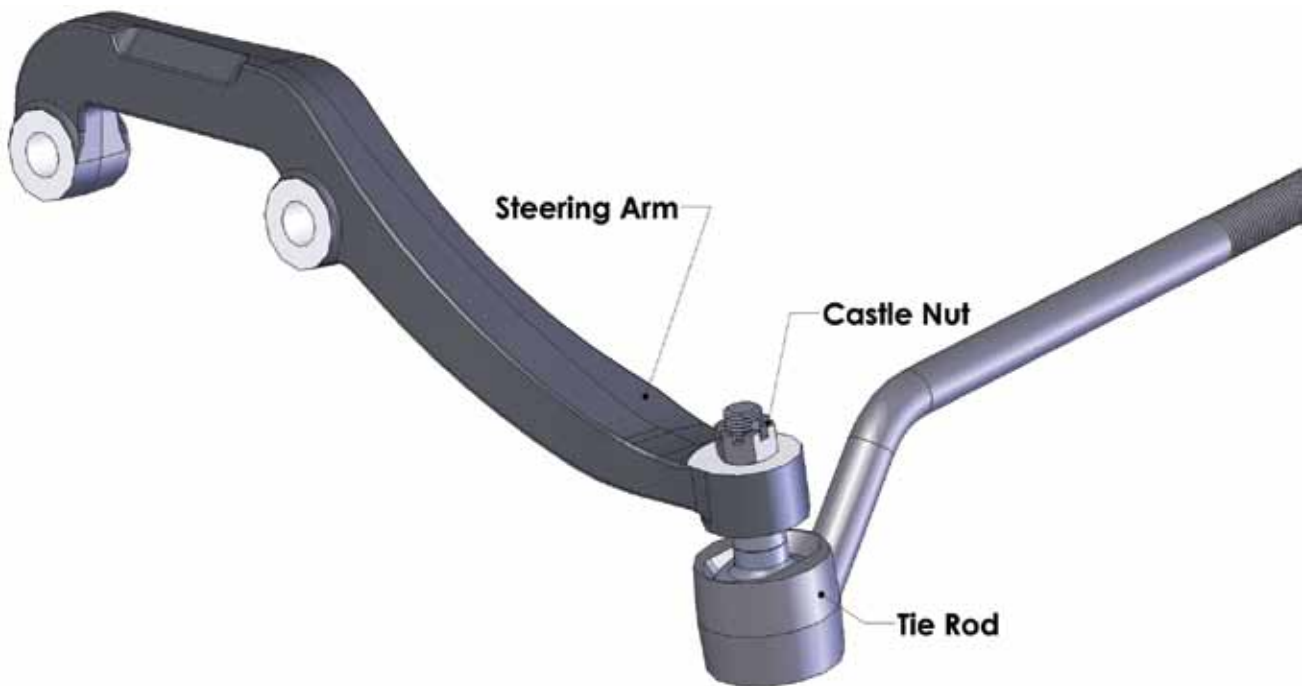

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500

378 E. Orangethorpe Ave. | Placentia, CA 92870 | www.classicperform.com