



Steering, Brake & Suspension Specialists

#6372FSRB Installation Instructions

1963-1987 Front Upper Shock Mount Reinforcing Kit

Parts List:

1 ea	Left Shock Mount
1 ea	Right Shock Mount
4 ea	3/8-16x1 Gr. 8 Bolt
4 ea	3/8-16 Gr. 5 Nut
4 ea	3/8 Lock Washer
8 ea	3/8 Flat Washer


Note:

CPP recommends replacing the shock mounting studs part number CPMS.

Instructions:

1. Remove the nut from the upper shock mounting stud.
2. Slide the new shock bracket over the end of the shock mounting stud and tighten the nut.
3. Using the new shock mounting bracket as a guide, drill two holes in the side of the frame.
4. Bolt the shock mounting bracket to the frame using the new 3/8" hardware.

**SHOCK
BRACKET**

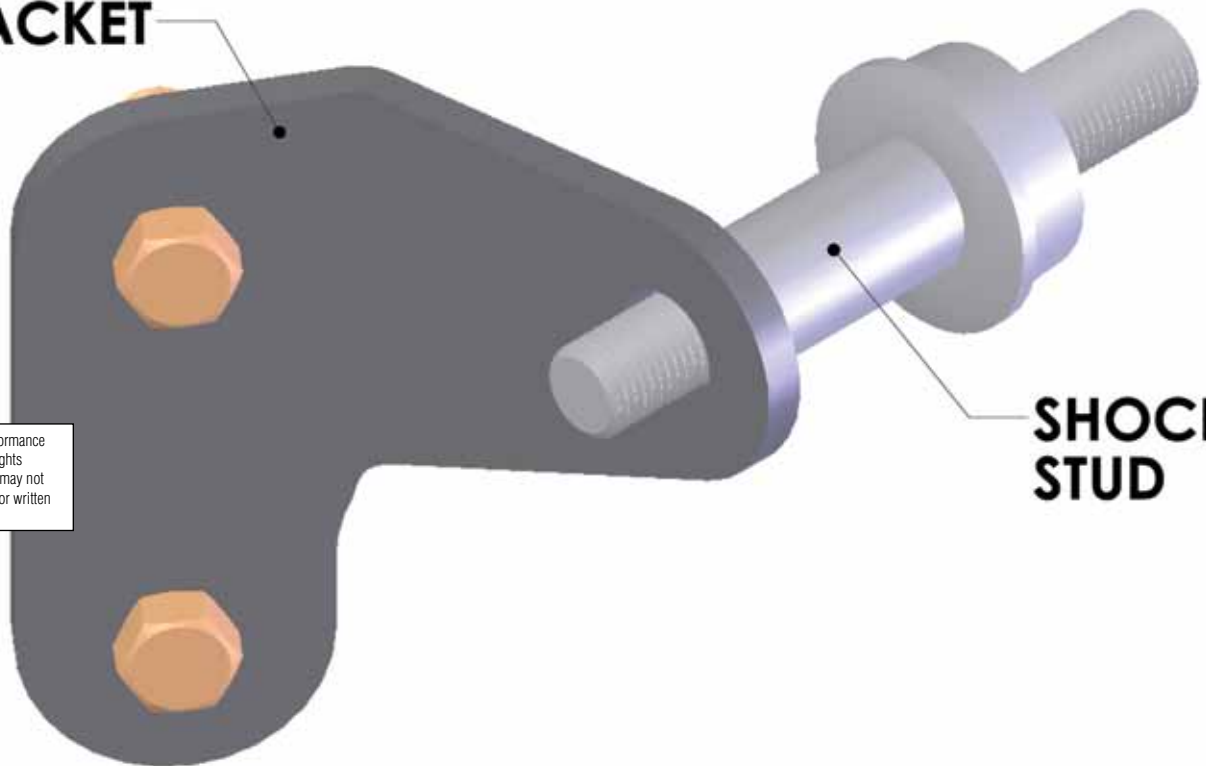

**SHOCK
STUD**

© Copyright Classic Performance Products, Inc. 2006 All Rights Reserved. This document may not be reproduced without prior written permission of CPP.

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500
378 E. Orangethorpe Ave. | Placentia, CA 92870 | www.classicperform.com