



Steering, Brake & Suspension Specialists

#6372MP-T Tubular Engine Mount Instructions

1963-72 Small Block and LS1 V8 Engine Mount

Parts List:


1 ea	Left Mount Bracket
1 ea	Right Mount Bracket
2 ea	7/16-14x4 Bolts Gr.8
2 ea	7/16-14 Nuts
2 ea	7/16 Lock Washers
4 ea	7/16 Flat Washers
4 ea	3/8-16x1 Bolts Gr.8
6 ea	3/8-16 Nuts
6 ea	3/8-16 Lock Washers
10 ea	3/8" Flat Washers

Notes:

The original rubber engine mounts will need to be changed to the 1959-1970 passenger car. This bracket will mount a LS1 engine when used with CPLS1-K.

Instructions:

1. Remove the original engine mounting brackets, and rubber engine mounts.
2. Install the new rubber engine mounts on to the engine.
3. Install the new engine mounting brackets.

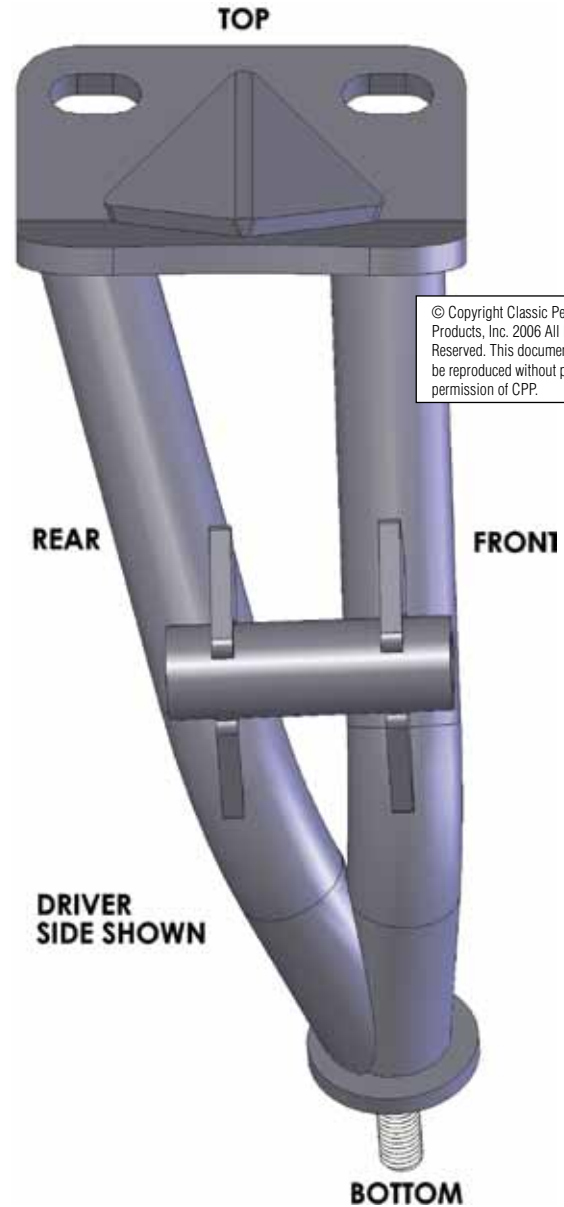

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500
378 E. Orangethorpe Ave. | Placentia, CA 92870 | www.classicperform.com