



Steering, Brake & Suspension Specialists

Installation Instructions for Drop-Out Battery Box

Parts:


- (4) Grade 8, 5/16" bolts. The length will depend upon the depth of the frame it is bolted to.
- (4) Lock washers
- (4) Washers
- (4) Self-Locking Nuts

Note:

Read these instructions completely before attempting this conversion.

Instructions:

1. To mount the battery box, you will need to clear an area on the frame to the dimensions of 12-1/4" wide x 8-1/4" deep from the frame to the outside edge of the battery box as well as a clear area underneath the box for the dropout
2. Disassemble the receiver that bolts to the frame from the battery box. Use the receiver as a pattern for drilling your mounting holes through the frame. Note that we have designed a double bolt pattern in the receiver so it can be used on either a 3", 4" or 6" wide frame.
3. Bolt the receiver to the frame using the four grade 8 bolts, lock washers, washers and nuts.
4. Install the battery into the box and secure it in place with the provided eye bolts. Note the position of the eye bolts in the diagram below. Use the slot on the back side of the battery box that best fits the size of your battery. The box is designed for either a top post or side terminal battery.
5. Slide the battery box up into the mounted receiver far enough to catch in the first latch position. This is the "service" position.
6. Connect the battery cables.
7. Push the battery box up into the "locked" position.

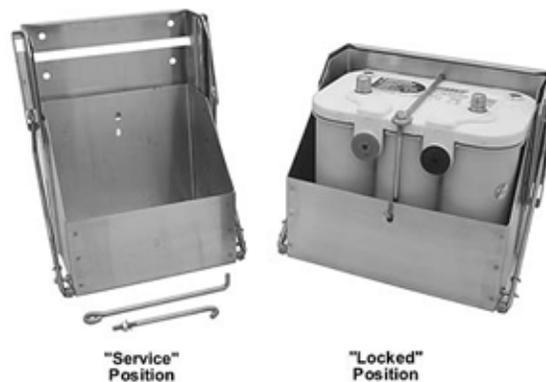

© Copyright Classic Performance Products, Inc. 2006 All Rights Reserved. This document may not be reproduced without prior written permission of CPP.

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500

378 E. Orangethorpe Ave. | Placentia, CA 92870 | www.classicperform.com